手把手教你使用 CKLink 调试 W80x

作者:大胡子 W806 技术交流 QQ 群: 739265828

- 1、准备工作:
 - A、 软件: CDK 开发平台 2.10.1 版、 SDK 包 0.4.0 版 、Flash 模板 (qq 群下 载, 群友冷蜂制作)
 - B、 硬件: CKLinkLite 仿真器, 固件版本 2.30 版; W80x 开发板



2、硬件接线:

CK-LINK-Lite 仿真器	W806 开发板
3V3	3V3
TRST	RST(复位脚) 推荐接上硬复位稳定
ТСК	CLK (PA1)
TMS	DAT (PA4)
GND	GND

3、CKLinkLite 插入电脑,按接线表接上 W806 开发板,驱动一般在安装 CDK 时已经安装上



如果识别不出,有以下可能原因:

- A、 自制的调试器有硬件错误
- B、 检查驱动
- C、 检查更换 usb 线
- 4、 准备好 flash 模板文件

QQ 群文件 02 文件夹内下载模板文件, 解压后放到类似下图目录:

	→ 文件 (D:) → C-Sky → CDK → CSKY →	Flash 🕨	▼ 4 / 搜索 Flas	h	• • • • • • • • • • • • • • • • • • •
组织 🔻 📄 打开 🕴	新建文件夹				
☆ 收藏夹	名称 ^	修改日期	类型	大小	
🚺 下载 🗉	퉬 ck5a6-39VF6401b-big	2021/11/10 14:50	文件夹		
💻 桌面	腸 ck5a6-39VF6401b-little	2021/11/10 14:50	文件夹		
🗐 最近访问的位置	ck5a6_big_driver_Uart.elf	2021/4/27 15:17	ELF 文件	158 KB	
	ck5a6-39VF6401b-big.elf	2021/4/27 15:17	ELF 文件	21 KB	
二 唐	ck5a6-39VF6401b-little.elf	2021/4/27 15:17	ELF 文件	21 KB	
	📝 FlashOS.h	2021/4/27 15:17	H 文件	1 KB	
	W806_Flash_Tool.elf	2021/10/11 19:51	ELF 文件	46 KB	
GitHub ←	レイ 美型: EL 大小: 45	F 文件 .8 KB			
W806_Flash_T ELF 文件	ool.elf 修改日期: 2021/10/11 19:5 参改日期 大小: 45.8 KB	8:2021/10/04/19:510 14:5	2		

5、打开 CDK 配置 Flash 模板 Flash->Flash Management...:

W806_SDK] D:\C-Sky\WM_SDK_W	806\Project\src\main.c		- 0 -
File Edit View SDK Project Flas	h Debug Peripherals Tools	Windows Help	
🖹 🖻 🖸 📄 🗙 🕹 🖻 🖻 📆	Download	🔚 🍳 🗟 🗖 🌈 🗊 🔛 🛇 🖬 📅 🔍 🍳 🌒) ∲ <mark>⊘ @ 0 ¥</mark>
Project View	Chip Erase	▼ main(void)	✓ Outline X
√∩∦¥ &	Configure Flash Tools		~
W806_SDK Buildset	2 #include (stdio.h 3 #include (wm_hal. 4 5 void Error Handle	n> .h" em (void);	Global Functions and V Key_flag Given from the first second
 inc src src ymn,nc ymn,hal_msp.c ymn,i.c Include Id Libraries Project 	6 static void GPI0_ 7 static volatile v 9 int main(void) 11 { 12 SystemClock_C 13 printf("enter 14 HAL_Init(); 15 GPI0_Init(); 16 GPI0_Init(); 18 HAL_Delay(500)	<pre>_Init(void); dint8_t key_flag = 0; Config(CPU_CLK_160M); r main\r\n");</pre>	GPIO_Init(void) GPIO_Init(void) GPIO_Init(void) GPIO_Init(void) GPIO_Init(void) GPIO_Init(void)
Output View		□:× Serial Pane	٦
☆ॗॗॖऒॖॖॖॖॖ ॖ ॖ ॖ ॖ ॖ ॖ ॖ ॖ ॖ ॖ ॖ ॖ ॖ ॖ ॖ			
		< <u> </u>	•
•		, Send:	✓ \r\n ▼
👤 Build 🧪 Search/Replace 🜔	References 🗹 CppCheck	✓ Uart #1 Uart #2 Uart #3 Debug(print)	~
	Ln	23, Col 0, Pos 349	TABS C++

点击 Add 添加 Flash 设备驱动 elf 文件

[W806_SDK] D:\C-Sky\WM_SDK_V	W806\Project\src\main	.c				
File Edit View SDK Project Fla	ash Debug Periphe	rals Tools Window	s Help			a abal a
	シャピャイン		ৰ বা দ্ৰা	🎯 🔛 🔛 🛇 🖬 🛅 ଷ୍ଠ ଷ୍ଠ 💿		S @ [€] ¥
Project View	<global></global>	•	main(void)		•	Outline X
	main.c 🗙				~	
W806_SDK	1				^	Include Files
W806_SDK	3 #includ	le (stdio.h> le "wm_hal.h"				Global Functions and V
4 W806_SDK	Algorithm Manage	ment			=	key_flag
A App	Algonalin manage	inent				GPIO Init(void)
	DevName	FlashID F	FlashType	Address Range		Error Handler(void)
	ck5a6-39VF640	bf236d 1	NorFlash	00000000H~00080000H		assert_failed(uint8_t
wm_hal_msp.c	ck5a6-39VF640	bf236d f	NorFlash	0000000H~00080000H		Functions Prototypes
🜍 wm_it.c	ck5a6-big-Uart	bt236d	NorFlash	00000000H~00080000H		- [] Error_Handler(void,
Include						GPIO_Init(void)
Þ 🦲 Ld						
Libraries				•		
Project 🗸	Selected Flash Algo	orithm File:				<
0	D:\C-Sky\CDK\CSH	(Y\Flash\W806_Flash_T	ool.elf			
				Dalata		<u>کې</u>
			Add	Delete		
			•	m		Þ.
< III			, Send:			✓ \r\n ▼
U Build 🖊 Search/Replace 🤇	🔵 References 🗾	CppCheck	✓ Uart #1	Uart #2 Uart #3 Debug(print)		~
		Ln 23, Col (), Pos 349			TABS C++

选择 W806_Flash_Tool.elf 文件,点击打开

[W806_SDK	(] D:\C-Sky\WM_SDK_W	/806\Pr	oject\src\main.c	11-1-				
		Sn De				0000		*
Project View		alobal		main(void)			Outline	×
√⋒ぶ	* &		×					
W806 SDK		main.c	^					Filer
W806 SDK	Add File						×	unctions and V
4 W806	● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ●	鄆机 ▶	文件 (D:)	► Flash ►	▼ € ₇	搜索 Flash	Q	lag
A App	组织 ▼ 新建文件	夹				933 👻		(void)
	📄 2021工作	*	名称	修改日期	类型	大小		_Handler(void)
	GitHub		k526-30//66401b-big	2021/11/10 14:50	立件主			rt_failed(uint8_t
C	📄 天翼云盘下载		k5a6-39VF6401b-little	2021/11/10 14:50	文件夹			s Prototypes
[🖹 文档		ck5a6_big_driver_Uart.elf	2021/4/27 15:17	ELF 文件	158 KB		-Handler(void,
▷ Inclu	→ 音乐	=	ck5a6-39VF6401b-big.elf	2021/4/27 15:17	ELF 文件	21 KB		_Init(voia)
			ck5a6-39VF6401b-little.elf	2021/4/27 15:17	ELF 文件	21 KB		
	🜉 计算机		W806_Flash_Tool.elf	2021/10/11 19:51	ELF 文件	46 KB		
Project	🏭 系统 (C:)							
Output View	🕞 文件 (D:)							.OX
	😠 video (\\FileDi	sl						E-1
₩@ <u></u> Ξ	🤜 docker (\\192.	.1 *						
	3	文件名(1	N): W806_Flash_Tool.elf		-	elf files (*.elf)	•	
					[打开(O)	同当	
					l		-54.143	
•				, Send:				✓ \r\n ▼
🛃 Build 🥖	Search/Replace C	Refe	erences 🗹 CppCheck	✓ Uart #1 Uart #2	Uart #3 Del	bug(print)		~
			Ln 23, Col 0,	Pos 349			TABS	C++

[W806_SDK] D:\C-Sky\WM_SDK	_W806\Project\src\main	.c				
	S - C - C - C		s Heip	© ∰ ∰ ⊗ ⊡ ∰ 0 0 ⊂		0 @ 0 ¥
Project View	<global></global>		main(void)		•	Outline X
√ û ∦ ¥ 🔗	main.c ×				~	
W806_SDK 👻 BuildSet 💌	1					▷ <> Include Files
📮 W806_SDK	2 #includ 3 #includ	le ≺stdio.h> le ″wm hal.h″				A Global Functions and V A
4 W806_SDK	Algorithm Manage	ment			=	key_flag
App inc	DavNama	FlachID	FlachTurne	Address Pange		GPIO_Init(void)
a 🧧 src	ck5a6-39VF640	bf236d	NorFlash	00000000H~00080000H		Error_Handler(void)
C main.c	ck5a6-39VF640	bf236d	NorFlash	00000000H~00080000H		d assert_failed(uint8_t
wm_hal_msp.c	ck5a6-big-Uart	bf236d	NorFlash	00000000H~00080000H		Error_Handler(void,
Include	W806	8102	NandFlash	08000000H~08100000H		GPIO_Init(void)
⊳ <mark>—</mark> Ld		~				
Libraries	•			•		
Project 🗸	Selected Flash Algo	orithm File:				<
Output View	D:\C-Sky\CDK\CS	(Y\Flash\W806_Flash_1	ool.elf			X ^D
			Add	Delete Help		-
			•	III		
			Send:			▼ \r\n ▼
Build / Search/Replace	🔘 References 🔽	CppCheck	✓ Uart #1	Uart #2 Uart #3 Debug(print)		~
		Ln 23, Col	0, Pos 349			TABS C++
1. L.						1 I I

添加模板进工程后会显示多了一个 W806

6、继续打开 Flash->Configure Flash Tool...:



点击 Add, 添加 W806, 选项参考下图:

File E	roject Settings	8
	Build Type: BuildSet	
Project		×
76	Target Output User Compiler Assembler Linker Debug Flash	
W806_	Use Target Driver for Flash Programming O Use External Tool for Flash Programming	
🖵 W8		s and V
	Options for Target Univer	
	Init File: \$(ProjectPath)/flashinit	id)
	hali	er(void)
	DownLoad Function red	(uint8_t
	● Erase Full Chip	er(void,
⊳	© Erase Sectors 🛛 Verify	vid)
Þ	○ Do Not Erase ✓ Reset and Run Hard Reset ▼ 0x	
P.		
Projec	DevName FlashID FlashType Address Range	+
Outpu	rampe needs ang	۵x
20		
	Remove Add	
		Þ
•		(n ▼
J B	OK Cancel Help	~

File E	Project Settings									
Project	Build Type: BuildSet									
✓ G W806_1 W8	Target Output User Compiler Assembler Linker Debug Flash 06_1 Image: Second									
4	Init File: \$(ProjectPa	Flash Driver Setup			—	Q	l) (void)			
Þ	 DownLoad Function erase Full Chip Erase Sectors 	DevName ck5a6-39VF640 ck5a6-39VF640 ck5a6-big-Uart W806	FlashID bf236d bf236d bf236d 8102	FlashType NorFlash NorFlash NorFlash NandFlash	Address Range 00000000H~00080000H 00000000H~00080000H 000000000H~00080000H 080000000H~08100000H	E	ndler(void) led(uint8_t ototypes n <i>dler(void,</i> (void)			
Þ Þ Projec	💿 Do Not Erase	•		III						
Outpu 값 @	DevName	Selected Flash Algo D:\C-Sky\CDK\CSK	rithm File: Y\Flash\W806_F	lash_Tool.elf	d Cancel Help		ΰ			
					Remo	ve Add	4			
✓B	1		1		ОК	Cancel Help	\/r\n •			

注意配置,这里很多人翻车

File E	Project Settings					×	
	Build Type: BuildSet					-	
Project			the last first				×
76	Target Output User	Compiler Assembler L	inker Debug Flash				
W806_	Use Target Driver for	r Flash Programming	0	Use External Tool for Flash Programming		Â	
W8	Options for Target Dr	iver					ons and V
4	Options for rarget of	iver)
	Init File: \$(ProjectP	ath)/flashinit			🝳		(void)
							ndler(void)
	- DownLoad Function	1					ototypes
	Erase Full Chip		V	Program		E	ndler(void,
Þ	Erase Sectors	-		Verify			(void)
	O Not Erase			Reset and Run Hard Reset 🔹 🛛	x		
Projec	DevName	FlashID	FlashType	Address Range			•
Outpu	W806	8102	NandFlash	0800000H~0810000H	N		Γ×
20					43		
				В	emove Add		
	•					F F	•
-							\r\n ▼
J B				ОК	Cancel Help	•	~
	1				1 1	3	

以上 flash 模板配置部分就完成了。

7、设置 DEBUG, 配置参考下图:



File Ed	Project Settings Build Type: DuildCat	×	x e
Project V V W806_St W800 V W800	Target Output User Compiler Assembler Linker Debug Flash Preprocessor symbols		x ns and V oid)
Project Output	BicKが良的代码优化等级这样选 Lauguage and Code Generation Debug Level: Default (-g) Optimization: Optimize (-Og) Support ANSI programs ⑦ One Elf Section per Function ③ One Elf Section per Data ⑤ Strict Volatile Bitfields Warns Warns Check syntax only Pedantic Pedantic Pedantic Nhibit all warnings ⑦ All warnings Warnings as errors Warnings as errors	в	Iler(void) d(uint8_t otypes <i>Iler(void,</i> oid) L
۲ ای Bui	Include paths: \$(CDKPath)/CSKV/MinGW/csky-abiv2-elf-toolchain/csky-elfabiv2/include;\$(ProjectPath);\$(ProjectPath),/Include;\$(Project]		

这里也比较重要,优化等级太高会丢失调试信息

Eile Ed	Project Settings	
	Build Type: BuildSet	
Project		×
√⑥	Target Output User Compiler Assembler Linker Debug Flash	
W806_SE	Connector Configurations	
₩80	© Use Simulator Settings © Use: ICE Settings 2	ns and V
	Init File: \$(ProjectPath)/gdb.init 选择使用ICE选项 Remote ICE OpenOCD	oid) ller(void)
	☑ Load Application to Target □ Perform Reset after Load	d(uint8_t otypes <i>fler(void,</i>
Þ	After Load:	oid)
D	☑Auto Run ☑ Stop at main 注意选项,避免停不到main	
Project	Misc Configurations	. F
Output	Reset CPU Type: Hard Reset Ox 0	٦D×
~ 🗸	After Reset:	
	Start with CDK core file: S(ProjectPath)/S(ProjectName).cdkcore	
	Click Help button to confirm the sequence of debug launch.	r\n ▼
U Bui	OK Cancel Help	~

注意在右侧窗口观察调试器连接硬件的信息,正常连接后应该有调试器和开 发板的信息。

配置选项也要注意看图选择。

🚾 [W80	0.1.10.11						2 X
File Ed	Project Settings	ICE Configuration			— ×	23	
Project V	Build Type: Bu	ICE Adaptor		Connected Debug Target		•	×
1 ₪	Target Output	ICE Clock (KHz): 12000		T-HEAD CKLINK:	^		
W806_SC	Connector C	mtcr Delay (ms): 10		App Ver : 2.30	-		
₩80	🔘 Use Simu	Reset Wait(ms): 50		ICE Clk : 2526.316KHz 2-wire, With DDC, Cache Flush OnSN	-		ns and v
a 0	Init File: \$(Pr	CPU Number: 0		CKLink_Lite_V2-6326F44794. + Debug Arch is CKHAD+			oid)
1	Load Config	Use DDC Enable TR	ST	[CPU: 0]+ CPU 0+ [CPU: 0]T-HEAD Xuan Tie CPU Info:			d(uint8 t
	🔽 Load App	Enable debug print Other Flags:		WORD[0]: 0x04a11453 WORD[1]: 0x11000000	Ŧ		otypes <i>Iler(void,</i>
Þ	After Load:	注音CVIII	이나바다고		late		ioid)
D	🔽 Auto Run				-		
Project	Misc Configu	Connect		Download Options	- 11		F.
Output	Reset CPU T	Connect: Normal 🔻		RTOS Type: Bare Metal 🔻	E		٦C
~ (-	After Reset:	Reset After Connect:		🗹 Download To Flash		🝳	
	🖾 Start with	Hard Reset 🔻 0x 0					
	Click Help bu				*		•
•				OK Cancel I	Help		r∖n ▼
U Bui						Help	~
	1	1		1		,di 1 1	

8、下面开始调试工程,鼠标左键点击编辑器左侧空白处添加断点



[W806_SDK] D:\C-Sky\WM	I_SDK_W806\Project\src\main.c					
File Edit View SDK Project Flash Debug Peripherals Tools Windows Help						
Project View				Outline X		
	er (<global></global>	main(void)				
	Properties for breakpoint 3		X			
W806_SDK BuildSet	Select the type of the breakpoint:			Include Files		
	Breakpoint			kev flag		
A App	Reak hu line function or moment address:			main(void)		
▷ <mark>i</mark> nc	break by line, function of memory address		GPIO_Init(void)			
a 🦲 src	File name D:\(C-Sky\WM_SDI At line: 19		Error_Handler(void)		
C main.c				assert_tailed(uint8_t		
wm_nai_msp.	◎ Function name			Error_Handler(void,		
▷ Include				GPIO_Init(void)		
D 📩 Ld	○ Memory address 0x					
Libraries						
Project						
	Conditional Breaks: Add any condition here	-				
Output View			^	٦X		
\$\$₩ - ₹ 2 10 10			~			
	🗖 Disable 📄 Make temporary 🔍 H	lardPoint Ignore count: 0				
		2				
	ОК	Cancel				
				۰.		
< III	✓ \r\n ▼					
U Build 🖊 Search/Replace 🔘 References 🗹 CppCheck 🗸 Uart #1 Uart #2 Uart #3 Debug(print)						
	Ln 19	Col 0, Pos 289		TABS C++		

开始调试仿真:

K [W806_SDK] D:\C-Sky\WM_SDK	(_W806\Project\src\main.c			
File Edit View SDK Project F	Flash Debug Peripherals Tools Windows H	Help		
🖹 🗎 🖸 📔 🗶 👗 🔚	<u>ち・さ・<> </u>	🛛 🖸 🖉 🔛 🖓 🚺	📆 🔍 🍳 📄 🖉 ८	P 🚷 🕢 🖌 🕷
Project View	<global> • m</global>	ain(void)	Start/Stop Debu	Outline X
✓ ⋒ ※ ※	main.c ×		•	igger currs
W806_SDK BuildSet W806_SDK W806_SDK M806_SDK M806_SDK App Sinc Sinc Sinc Sinc Sinc Sinc Sinc Sin	7 8 9 10 11 12 12 SystemClock_Config(CPI printf("enter main\r\r HAL_Init(); 13 14 14 HAL_Init(); 15 CPI0_Init(); 16 while(1) { 17 while(1) { 18 19 19 HAL_Delay(500); 20 Key_flag++; 21 if(key_flag % 3 == 0) 23 HAL_GPI0_WritePin: 24 HAL_GPI0_WritePin: 25 HAL_GPI0_WritePin:	<pre>y_flag = 0; 点击开始 /_CLK_160M); /); (GPIOB, GPIO_PIN_24, 0); (GPIOB, GPIO_PIN_25, 1); (GPIOB, GPIO_PIN_25, 1);</pre>		Include Files Includ
Output View	₽:×	Serial Pane		۵×
☆ 🖗 王 図 也 自 自				
		•		4
•	,	Send:		✓ \r\n ▼
U Build / Search/Replace	🔘 References 🗹 CppCheck	Uart #1 Uart #2 Uart #3	Debug(print)	~
	Ln 19, Col 0, Po	os 289		TABS C++

W806 SDK 1 D:\C-Sky\WM SDK W806\	Project\src\main.c	×					
File Felt View SDK Project Flack Delyng Perinberals Tools Windows Help							
■ 🖻 🗐 🖹 🗙 🖌 🖻 🗐 ち マ		-					
Project View	× Disassemble Soft Reset	×					
	0x08011a04 <main+4>: e000013a bsr 0x8011c78 // 0x8011c Hard Reset ></main+4>						
	0x08011a08 <main+8>: 110f lrw r0, 0x8013634 // 0x8 nBeset</main+8>						
W806_SDK v BuildSet	© 0x08011a0a <main+10>: e3ffff9b bsr 0x8011940 // 0x8011940 spursz</main+10>						
WAUE CDK	@x08011a0e <main+14>: e0000207 bsr 0) 洗择硬件复位MAL 比较可靠</main+14>						
Project	✓ © 0x08011a12 <main+18>: e3ffffd5 bsr 0x201+0010000000000000000000000000000000</main+18>						
Register	×	-					
Q Search	<global> main(void)</global>	•					
Name Value	main.c ×	~					
t opr	<pre>8 static volatile uint8_t key_flag = 0;</pre>	*					
+ fpu	9 10 D int main(waid)	-					
⊕ cr		-					
. ● fvcr	<pre>12 SystemClock_Config(CPU_CLK_160M);</pre>						
🖲 ree	HAL Init()						
🗈 tee	15 0 GPIO_Init(); 新占右效信件						
⊕ all							
general							
		-					
Debugger	Frame Into	ΥŪ					
ID Type Enabled	File						
2 HardPoint enabled	D:\C-Sky\WM_SDK_W Add						
3 HardPoint enabled	D:\C-Sky\WM_SDK_W						
4 HardPoint enabled	D:\C-Sky\WM_SDK_W Edit						
< III	Delete						
Realizate Threads	trut () Command () OCTascate () Locale () Waterbar () Call Stack () Mamory	, i					
Breakpoints of Interest Command of Periode Of Datas of Watches (Cansidate De Mentory)							
	Ln 15, Col 0, Pos 251 TABS C++	l t					

9、最后,点击 DownLoad 下载固件进开发板



这里直接用了 CKlink 的串口连接开发板的串口,通过 CDK 软件的串口功能显示右下角的烧录信息。

Cklink 的串口使用注意事项参见 QQ 群 02 文件夹内另一篇教程。